 


Congratulations on your purchase of a high-quality Insignia product. Your new digital picture frame is designed for reliable and trouble-free performance.

Package contents


- Digital picture frame
- AC power adapter
- Memory Stick PRO Duo adapter
- Remote control with battery (CR2025)
- Cleaning cloth
- User Guide
- Quick Setup Guide

Sides

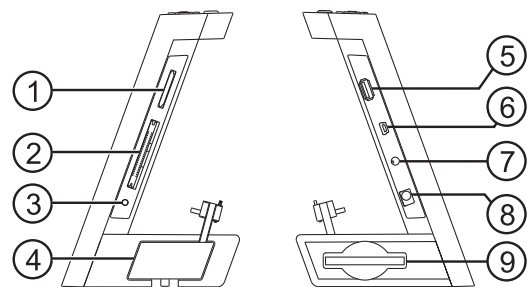

#	Description
1	Memory card slot (SD/SDHC/MMC/Memory Stick/Memory Stick Pro Duo/xD/microSD) Note: MicroSD and MS PRO Duo require an adapter.
2	Memory card slot CompactFlash (CF)
3	Headphone jack
4	iPod™/iPhone™ dock
5	USB port
6	Mini USB port
7	Line in connector
8	DC power connector
9	Remote control slot

 
Top

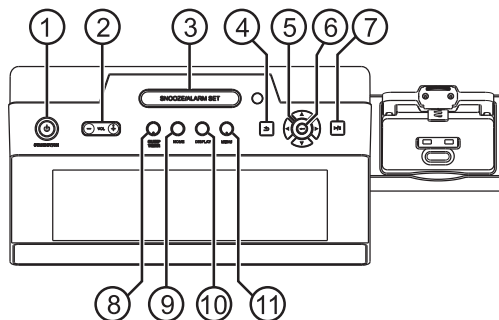

#	Description
1	Standby—press to enter Standby mode.
2	Volume up and down—press to increase or decrease volume during playback.
3	Snooze/Alarm Set—press to enter the alarm clock setup or to activate the snooze function.
4	Back—press to move backward through menus.
5	Up, Down, Left, Right—press to move the menu selection or to select the next or previous picture/song/video.
6	Enter—press to select a menu option.
7	Play/Pause—press to pause or resume a slideshow (Photo mode) or music or video playback.
8	Sleep Timer—enable Timer to turn off device automatically.
9	Home—press to return to the main menu.
10	Display—press to choose the display mode (normal, multi-image, clock, etc.).
11	Menu—press to bring up the menu.


Setting up the remote control

 
Remove the plastic tab that extends past the bottom edge of the remote control. This tab protects the battery. The remote control will not work until it is removed.

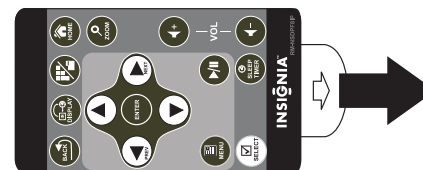

Setting up the frame



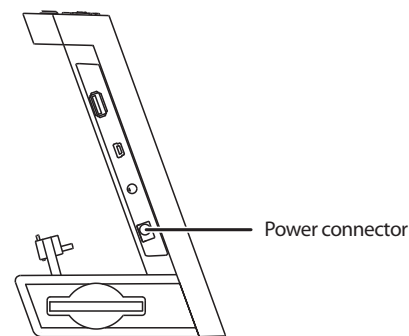





Plug the AC power adapter into the frame's power connector and into an AC power outlet.



To toggle between single- and multi-image slideshow modes or to display the clock, press  (**DISPLAY**) during slideshow playback.

Caution: Memory cards fit into the card slots in one direction only. Do not force a memory card into a slot. The card should fit snugly when inserted correctly. Some cards require an adapter to fit correctly.

Playing media from your iPod or iPhone




- 1 Plug your iPod or iPhone into the docking connector.
- 2 Press  (**HOME**) to return to the Home screen.
- 3 Press  or  to select the iPod icon, then press **ENTER**.
- 4 Press  or  to select the type of media you want to play (music or video), then press **ENTER**.
- 5 Press  or  to move through the menu and press **ENTER** to open a sub-menu.
- 6 Press  (**PLAY/PAUSE**) and **ENTER** to play selected media file or category.

For more information about using your digital picture frame, see your *User Guide* online at www.insigniaproducts.com.

6-month limited warranty

Visit www.insigniaproducts.com for details.

Viewing pictures on a memory card or USB device

- 1 Insert a memory card or USB device into one of the available memory slots or the USB port.
- 2 Slideshow begins automatically and displays pictures contained in the memory device you inserted.
- 3 Press  (Play/Pause) to pause the slideshow on a specific picture.
- 4 Press  (Play/Pause) again to resume the slideshow.
- 5 Press  (**DISPLAY**) to select the slideshow mode you want to view. Options include **Normal**, **Multi-Image**, or **Clock** display.